
























Verbindungselemente für den Holzbau
Éléments de fixation pour la construction en bois



Schrauben für den Holzbau, Holzverbinder Simplex und Bulldog, Toproc Stiften Boulons pour la construction en bois, connecteurs Simplex et Bulldog, Toproc Pointes

 DIN 571 6.001 – 6.003 zn	 6.003 zn	 DIN 603 Mu 6.004 – 6.006 zn	 6.006 4.8 zn	 DIN 601 Mu 6.007 – 6.008 4.6 zn
 DIN 25195 Mu 6.009 4.6 zn	 6.009 zn	 6.010 zn	 TBS 6.011 – 6.012 zn	 6.013, 6.015 zn
 6.014 zn	 6.015 zn	 6.016 zn / A 2	 6.017 A 2	 6.017 A 2
 6.018 A 2	 6.019 – 6.020 A 2	 6.021 A 2	 6.021, 6.023 zn / A 2	 6.022 zn
 6.023 – 6.024 zn	 6.024 zn	 6.025 – 6.026, 6.042 zn	 6.026 zn	 6.027 zn
 6.027 zn	 6.028 zn	 6.028 GH zn	 DIN 7996 6.029 zn	 DIN 7997 6.030 zn
 DIN 96 6.031 zn	 DIN 97 6.032 zn	 DIN 95 6.033 zn	 6.033 zn	 6.034 zn
 6.035 zn	 6.035 zn	 6.036 zn	 6.036 – 6.037 zn	 6.037 – 6.038 zn

Holzverbinder GH, Stützfüsse GH, Bozett-Profile, Z-Winkel, Hefteisen
Connecteurs GH, ancras de poteau GH, profilés Bozett, équerres, pattes

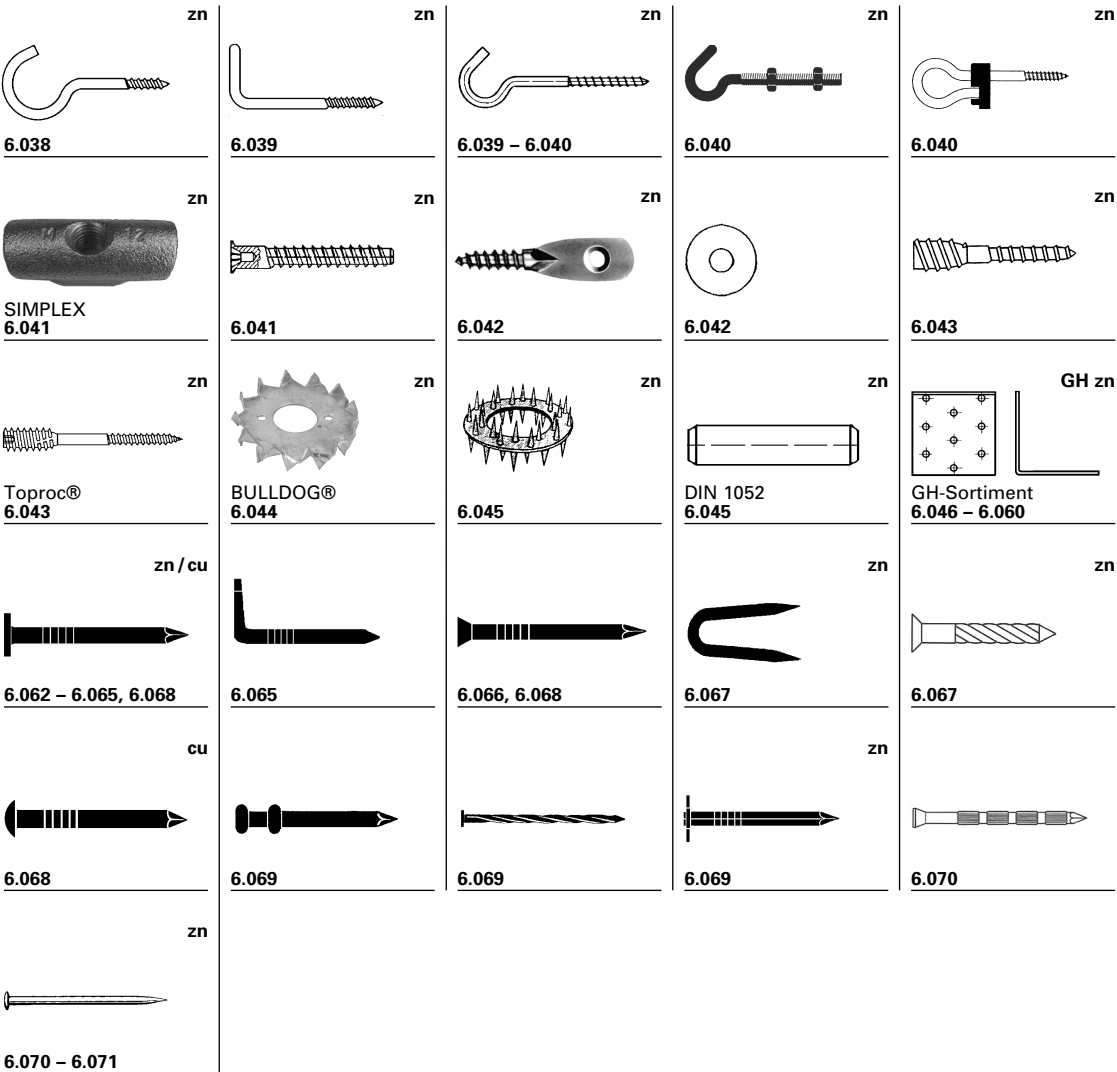

Verbindungselemente für den Holzbau
Éléments de fixation pour la construction en bois

